

## TOYOTA OBDII DTC

P1010	OCV for VVTL Circuit (Bank 1)
P1011	OCV for VVTL Open Malfunction (Bank 1)
P1012	OCV for VVTL Close Malfunction (Bank 1)
P1020	OCV for VVTL Circuit (Bank 2)
P1021	OCV for VVTL Open Malfunction (Bank 2)
P1022	OCV for VVTL Close Malfunction (Bank 2)
P1031	A/F Sensor Heater Circuit Low (Bank 1 Sensor 1)
P1032	A/F Sensor Heater Circuit High (Bank 1 Sensor 1)
P1051	A/F Sensor Heater Circuit Low (Bank 2 Sensor 1)
P1052	A/F Sensor Heater Circuit High (Bank 2 Sensor 1)
P1100	BARO Sensor Circuit malfunction
P1101	Atmospheric Press Sensor Circuit Range / Performance
P1120	Accelerator Pedal Position Sensor Circuit Malfunction
P1121	Accelerator Pedal Position Sensor Range/Performance Problem
P1125	Throttle Control Motor Circuit Malfunction
P1126	Magnetic Clutch Circuit Malfunction
P1127	ETCS Actuator Power Source Circuit Malfunction
P1128	Throttle Control Motor Lock Malfunction
P1129	Electric Throttle Control System Malfunction
P1130	Air-Fuel Sensor Circuit Range/Performance
P1133	Air-Fuel Sensor Circuit Response Malfunction
P1135	Air-Fuel Sensor Heater Circuit Response Malfunction
P1150	A/F Sensor Circuit Range/Performance Malfunction
P1153	A./F Sensor Circuit Response Malfunction
P1155	A/F Sensor Heater Circuit Malfunction
P1200	Fuel Pump Relay Circuit Malfunction
P1300	Igniter Circuit Malfunction No. 1
P1305	Igniter Circuit Malfunction No. 2 (1998-2000 Land Cruiser, 2000 Celica & Tundra)
P1310	Igniter Circuit Malfunction No. 2 (Except 1998-2000 Land Cruiser, 2000 Celica & Tundra)/ Igniter Circuit Malfunction No. 3 (1998-2000 Land Cruiser, 2000 Celica & Tundra)
P1315	Igniter Circuit Malfunction No. 4 (1998-2000 Land Cruiser, 2000 Celica & Tundra)
P1320	Igniter Circuit Malfunction No. 5 (1998-2000 Land Cruiser & 2000 Tundra)
P1325	Igniter Circuit Malfunction No. 6 (1998-2000 Land Cruiser & 2000 Tundra)
P1330	Igniter Circuit Malfunction No. 7 (1998-2000 Land Cruiser & 2000 Tundra)
P1335	No CKP Sensor Signal Engine Running
P1340	Igniter Circuit Malfunction No. 8 (1998-2000 Land Cruiser & 2000 Tundra)
P1346	VVT Sensor /Camshaft Position Sensor Circuit Range/ Performance Problem (Bank 1)
P1349	VVT System Malfunction
P1400	Sub-Throttle Position Sensor Malfunction
P1401	Sub-Throttle Position Sensor Range/Performance Problem
P1405	Turbo Pressure Sensor Range/Performance Problem
P1406	EGR Valve Position Sensor Circuit Malfunction

P1411 EGR Valve Position Sensor Circuit Ranger/Performance  
P1500 Starter Signal Circuit Malfunction  
P1510 Boost Pressure Control Circuit Malfunction  
P1511 Boost Pressure Low Malfunction  
P1512 Boost Pressure High Malfunction  
P1520 Stop Lamp Switch Signal Malfunction  
P1565 Cruise Control Main Switch Circuit Malfunction  
P1600 ECM BATT Malfunction  
P1605 Knock Control CPU Malfunction  
P1630 Traction Control System Malfunction  
P1633 ECM Malfunction ECTS Circuit  
P1645 Body ECU Malfunction  
P1652 IACV Control Circuit Malfunction  
P1656 OCV Circuit Malfunction  
P1658 Waste Gate Valve Control Circuit Malfunction  
P1661 EGR Circuit Malfunction  
P1662 EGR By-Pass Valve Control Circuit Malfunction  
P1690 OCV Circuit Malfunction  
P1692 OCV Open Malfunction  
P1693 OCV Closed Malfunction  
P1780 PNP Switch Malfunction