

VOLVO OBDII DTC

P1101	Power Stage Group A
P1307	Accelerometer signal
P1308	Accelerometer signal
P1326	Fault in engine control module (ECM) knock control circuit
P1327	Fault in engine control module (ECM) knock control circuit
P1328	Fault in engine control module (ECM) knock control circuit
P1329	Fault in engine control module (ECM) knock control circuit
P1401	Fault in engine control module (ECM) engine coolant temperature (ECT)
P1403	Fault in engine control module (ECM) control module box temperature sensor
P1404	Fault in engine control module (ECM) control module box temperature sensor
P1405	Temperature warning greater than 230 degrees F
P1406	Temperature warning greater than 212 degrees F
P1505	Idle air control (IAC) valve opening signal
P1506	Idle air control (IAC) valve opening signal
P1507	Idle air control (IAC) valve closing signal
P1508	Idle air control (IAC) valve closing signal
P1604	Ignition discharge module (IDM) group 0
P1605	Ignition discharge module (IDM) group E
P1617	Cable fault between AW 50-42 TCM and Motronic 4.4 ECM (lamp lights)
P1618	Cable fault between AW 50-Q2 TCM and Motronic 4.4 ECM (lamp lights)
P1619	Engine cooling fan (FC) low-speed signal
P1620	Engine cooling fan (FC) low-speed signal
P1621	Diagnostic trouble code (DIG) in automatic transmission control module (TCM)